

## STCT Roof Truss Clip

The STCT roof truss clip ensures alignment between a roof truss and non-bearing wall when the truss or rafter is not in contact with the top plates of the wall.

- The 38mm slot permits vertical movement of the truss chord when loads are applied.
- Embossed for greater rigidity.

**Material:** 1.3mm thick.

**Finish:** Galvanised. See Corrosion Information.

### Installation


- Use all specified fasteners. See General Notes.
- Install slot nails in the middle of the slot.
- To allow vertical truss movement, nails should not be driven completely flush against the connector.
- Products not intended for floor applications due to the frequency of floor joist deflections and potential for squeaks.




STCT

### Typical Installation



**STEP 1:** Align on the centre of the top plate and install nails.

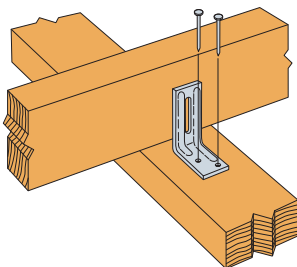


**STEP 2:** Install nail in centre of slot.

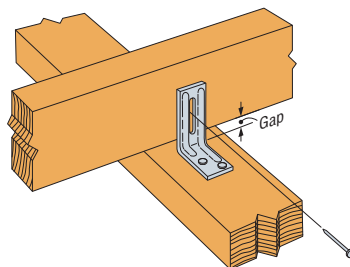

**STEP 3:** Truss nails not driven flush.

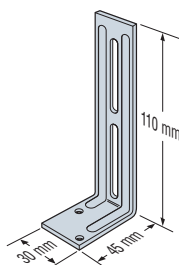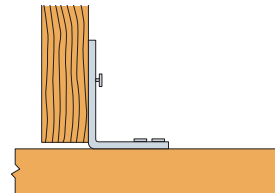

STCT

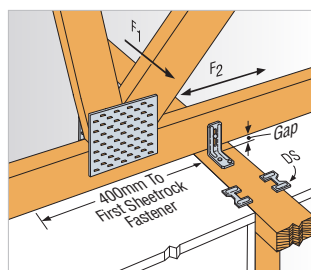

Typical STCT installation

To allow vertical truss movement, nails should not be driven completely flush against the connector.

### STCT Technical Data

Model No.	Fasteners (No. – Length x Dia., mm)	
	Base	Slot
STCT	2 – 30 x 2.8	1 – 30 x 2.8